

Connection Mode

USB connection

Connect the printer to PC with USB cable, and use it after installing the printer driver. The printer driver can be obtained from the supplier.

Bluetooth connection

- ① Turn on the printer and confirm that the printer is powered on normally;
- ② Search and select the printer with the Bluetooth communication device .
The connection password is "0000of1234". If the connection is successful, the Bluetooth indicator will be always on.(Andriod)
- ③The Apple app needs to search for connections.

Precautions For Use

- ① Printer can not be immersed in water or placed in high humidity ($\geq 85\%$) exposure to the sun, high temperature ($\geq 45\text{ }^{\circ}\text{C}$) and other harsh environments, otherwise it may lead to reduced print quality or printer damage.
- ② The USB cable must not be unplugged during the printing process of the wired model printer, otherwise it may lead to incomplete print data.
- ③ The use of poor quality or stored for too long printing paper may result in reduced print quality, or even damage to the printer.

All the contents on this material have been carefully checked, if there are any printing errors or misunderstandings in the content, you can consult with our company.

Note: If there is any technical improvement of the product, it will be written into the new version of the manual without prior notice. The product appearance and color, if any changes, shall prevail in kind.




Portable Receipt Printer

BP-01



Dear users: Thank you for choosing our products. We will provide you with high-quality products and considerate services. For better use of this product, please read this manual carefully before use.

Product Component Description

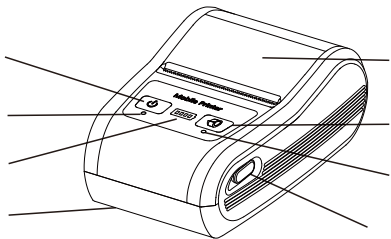


| | | |
|-------------------|----------------------------|-----------------|
| Power key | Battery cover | Feed key |
| Power indicator | Power interface | Paper bin cover |
| Battery indicator | Status/Bluetooth indicator | |

Technical Parameter


| | | |
|---------------------|-------------------|----------------------------------|
| Print Parameters | Printing Width | 48mm |
| | Paper Width | 58mm(57.5+/-0.5mm) |
| | Paper Thickness | 0.048mm-0.08mm |
| | Max Roll Diameter | ≤41mm |
| Physical Parameters | Interface | USB Bluetooth |
| | Appearance Size | 83.6(W)*118(D)*48.6(H)mm |
| | Net weight | 222g(Cashier paper not included) |

Basic Functions

Power on

When the printer is power off, Press the power key , the printer starts up and enters the working state, and the power indicator light is on.



Power off

When the printer is power on, Press the power key , the printer will shut down, and all indicators will go out.


Self-checking

After receiving the printer, you can perform self-test to detect the current printer settings and status.

self-checking method:

Make sure the printer is off and connected to power, keep pressing the Feed key , then press the power key , the printer will print out a self-test page. The self-test page contains information such as printer status, settings, etc.

Feed

When the printer is in normal working state, press the paper feeding key , the printer will start to feed paper.

Indicator Status

| LED Light | | Printer Status | |
|----------------------------|-------------|----------------|-------------------------|
| Power Indicator | Green Light | Always on | Turn on |
| | | Off | Turn off |
| Status/Bluetooth Indicator | Blue Light | Always on | Bluetooth connected |
| | | Off | Bluetooth not connected |
| | Red Light | Twinkle | Paper-out/fault |